


# QUICK REFERENCE GUIDE

T8u

## GETTING STARTED

### TABLEAU FORENSIC USB 3.0 BRIDGE

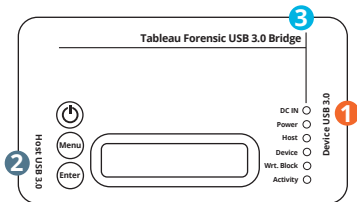

Confirm that the bridge is off before beginning.



1. Connect one USB source device\* to the T8u **1**
- \* *The T8u supports USB devices that conform to the USB Mass Storage Bulk-Only specification.*
2. Connect the bridge to the host computer using the host USB port **2**
3. Connect the power supply to the bridge's DC In **3**
4. Press the power button (⏻) and begin operation

Before you remove the connected USB device or power down the T8u, safely eject or unmount the device on your host computer.

## LCD MENU OPTIONS

- Device Info** Displays the connected USB device mfg, model, serial number and firmware version
- Select LUN** If the device has multiple LUNs, select a LUN to mount
- Bridge Info** Displays T8u firmware version, serial number, and DIP switch configuration
- Show Status** Displays information related to current status
- 

Use the Menu and Enter buttons to navigate through these LCD menus

- Menu**  Advance to next main menu screen
- Enter**  Advance to the first/next informational screen
- 

## CONNECTION RECOMMENDATIONS

### For USB Drive

Use cable supplied with USB drive or directly connect


### For the Host Connection

Use a Tableau USB 3.0 cable [TC-USB3]

### For Power (DC In)

Use a Tableau power supply [TP5 or TP2]

## DIP SWITCH SETTINGS

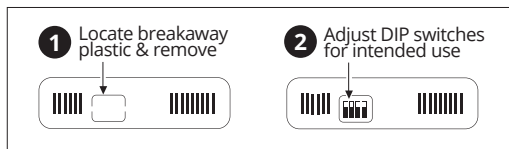

---

**SWITCH 1**    ON = Read/Write ⚠  
                  OFF = Read-Only

---

**SWITCH 2**    ON = Hide Write Protect  
                  OFF = Report Write Protect

---

**SWITCH 3**    ON = Hide Write Errors  
                  OFF = Report Write Errors

---

**SWITCH 4**    No Function

---

\*Default setting is OFF for all switches

## FIRMWARE UPDATES

Guidance Software releases free firmware updates for Tableau products through the Tableau Firmware Update (TFU) utility. Reference the TFU webpage for more information:

[www.guidancesoftware.com/tableau/tfu](http://www.guidancesoftware.com/tableau/tfu)



For additional product information, visit:  
[www.guidancesoftware.com/tableau](http://www.guidancesoftware.com/tableau)

For support:

Toll Free +1 (866) 973-6577

Main +1 (626) 229-9191

[tableausupport@guid.com](mailto:tableausupport@guid.com)